




Asus Transformer T100 Front Facing Camera Board Replacement

Replace the front-facing camera board.

Written By: Taylor Pantiga

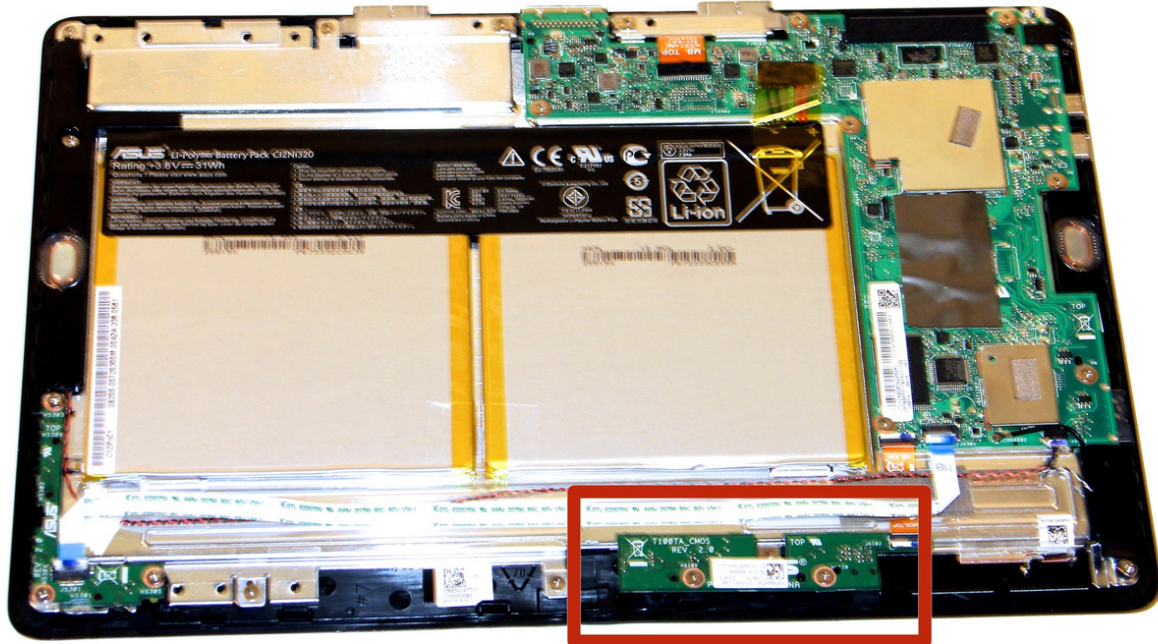

INTRODUCTION

Use this guide to replace the front-facing camera board on your Asus Transformer T100.

TOOLS:

- [Tweezers](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Rear Cover



- Separate the tablet from the base by pressing the large silver button below the tablet.
- Remove the tablet.

Step 2



- Insert the plastic opening tool into the seam of the tablet casing and gently pry upwards.
- With a little force, you will feel the clips release.


Step 3



- Slide the tool along all four edges of the tablet, making sure that all the clips are released.


⚠ Do not break these clips; otherwise, the screen will become less secure.

Step 4

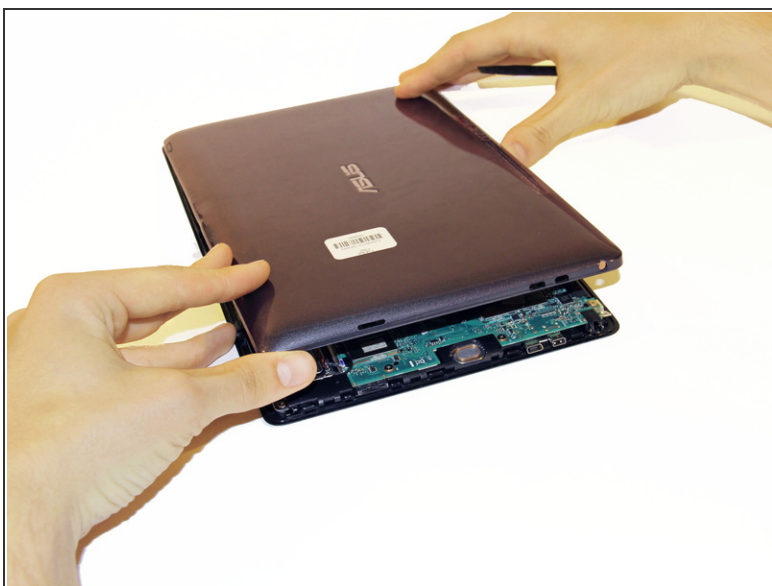



- Remove the rear casing.

Step 5 — Front Facing Camera Board

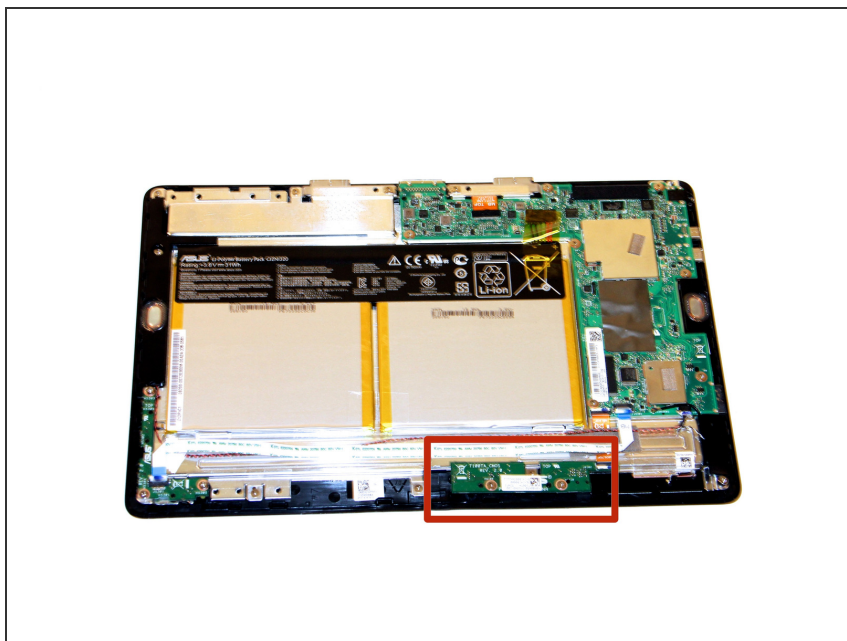


- The camera board is located in the red square in this image.

Step 6

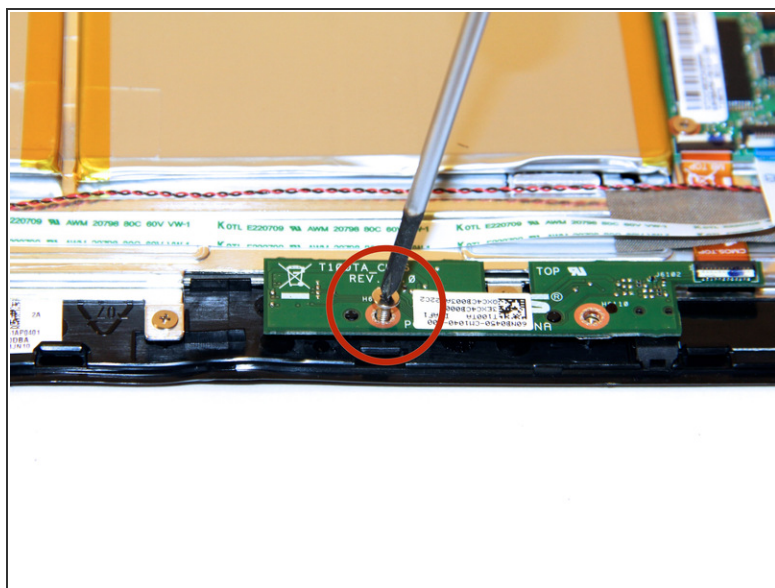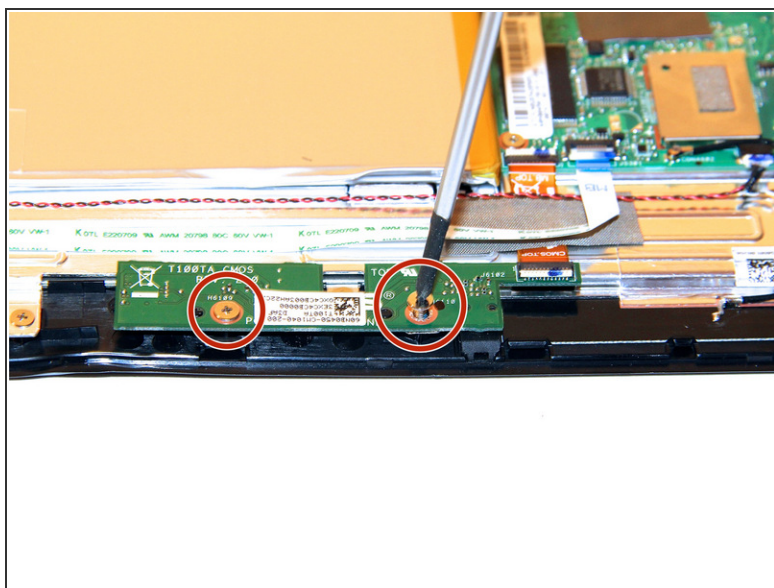


- Remove the two screws on the camera board using a Phillips #1 Screwdriver.

Step 7

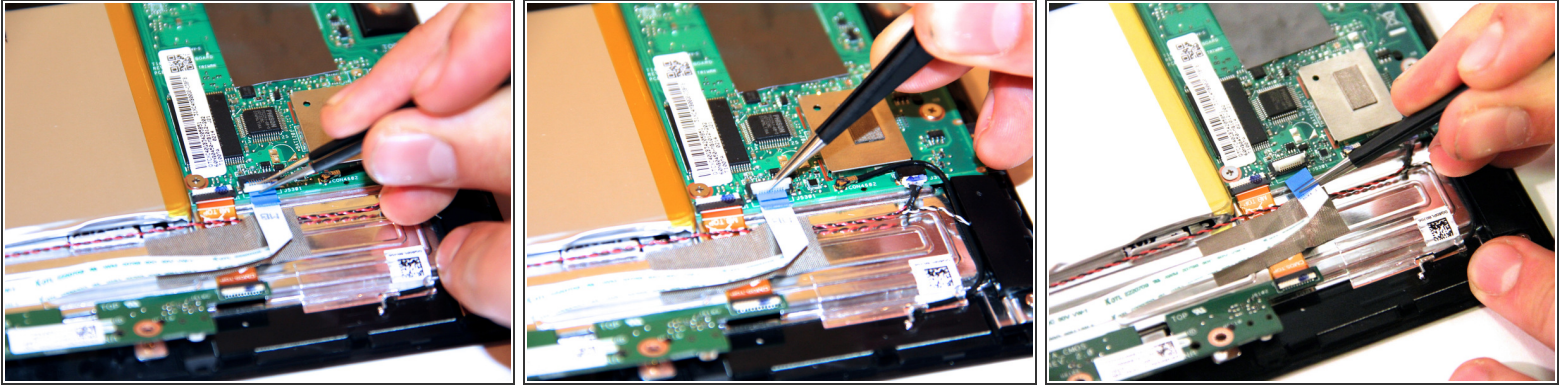




- Lift up the power button cable retention clip on the motherboard and pull the cable out.

Step 8

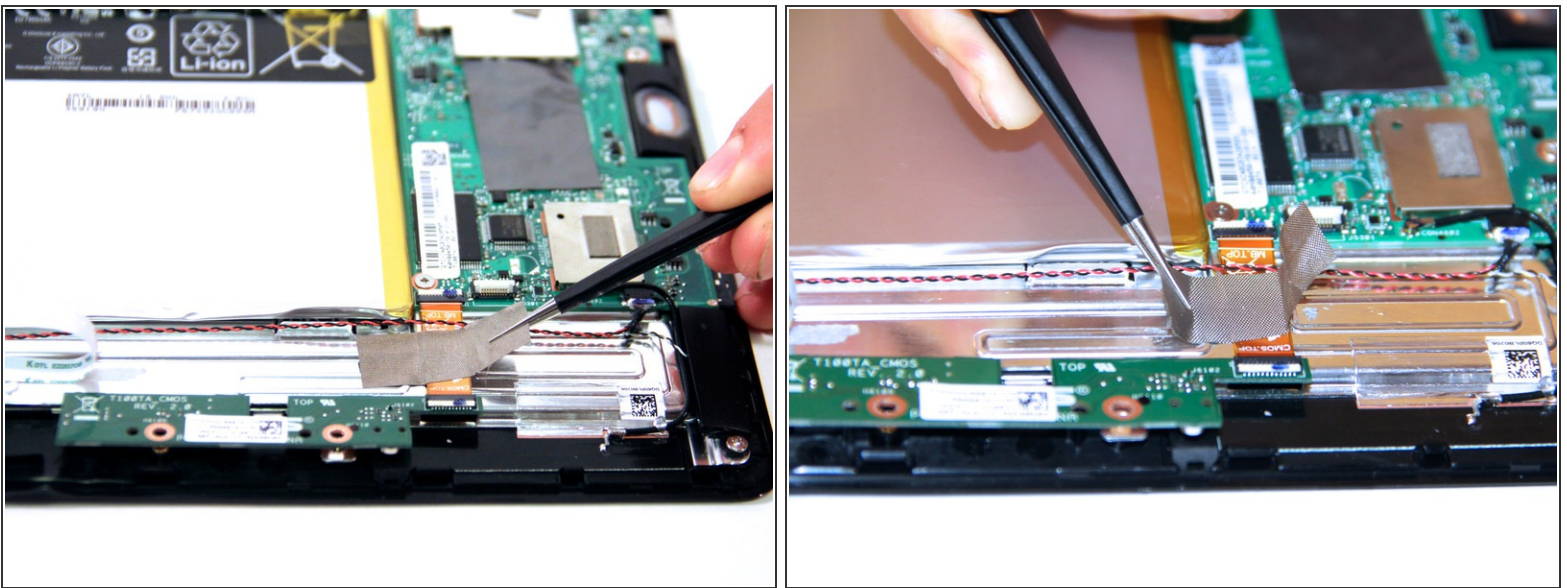

- On the camera connection apparatus, locate the silver tape that connects to the tablet.
 - Peel the silver tape off of the tablet on both sides of the connection apparatus.
- i** If this step has been completed correctly, the camera board should be loose, with the tape still attached to the connection apparatus.

Step 9

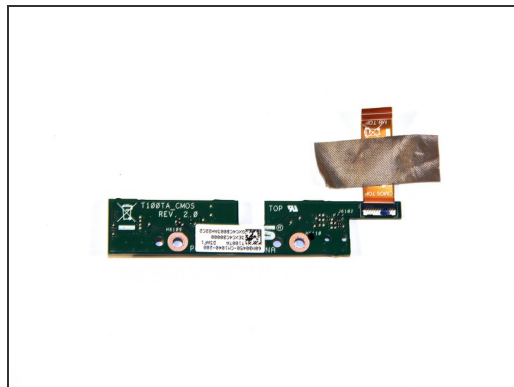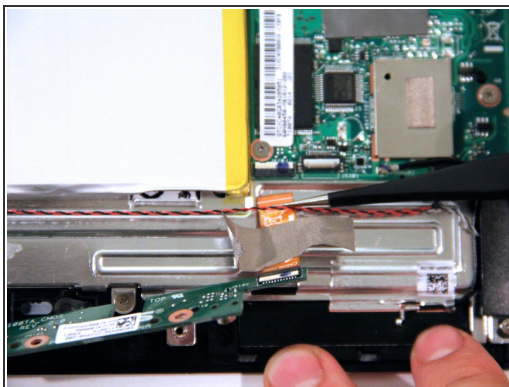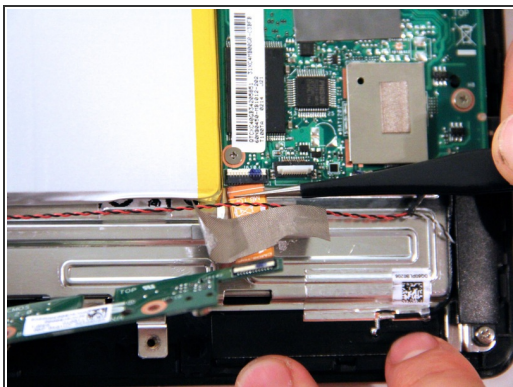

- Gently pull the Orange ribbon cable out of the connection port.
- i** This port has no clip. The orange apparatus should slide out with a small tug.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-21 01:01:40 PM.